



#99073 Quick Operation Guide

Please regularly check your E-Bike for a ride-ready condition.

This includes tight spokes, inflated tyres and responsive brakes.

Although we check the E-Bikes before shipping, we strongly advise you check the above on the Bike prior to riding for the first time.

1. Battery Charging

The battery must be removed to charge

To remove the battery – open the locking mechanism on the centre of the frame – the same lock as if you were folding the bike and fold the bike to expose the battery door.

Press the red switch to turn the battery power off

Insert the key and turn to release the battery to slide out.

Plug the charger into the battery port to charge.

Please ensure you regularly charge the battery to prolong lifespan. Do not overcharge.

Regular charging / discharging will keep battery in best form.

2. Assembly

Carefully lift the bike out of the box.

Slot the battery into the space into the frame and lock with the key

Unfold the bike to complete the frame and lock the central locking pin in place. Some adjustment may be needed to get the locking clasp to fit properly – this can be done by rotating the locking clasp clockwise / counter-clockwise to tighten / loosen.

This should be a snug fit, but not forced in. If the central frame or locking clasp has movement once locked, it will need tightening.

Once the mid-section is locked in place, bring the handlebar stem up into position and lock with the locking clasp. Finally, adjust the saddle and handlebar height with the relevant locking clasps, and then unfold the pedals. To fold the pedals back in, squeeze the trigger inside of the pedals and fold in at the same time.

3. Motor Starting

Ensure battery is switched to ON position (This can be found inside the frame when the bike is folded)

Press and hold power button on the control panel for one second.

When the display illuminates, the bike is switched on.

4. Controls

To switch front light on, press & hold the PLUS button (above the power button) for 1 second. Repeat the turn light off.

Assist levels range between 0 (no assistance) & 5 (maximum assistance) – use the up and down keys when the bike is switched on to cycle through the appropriate levels.

3 is a good balance of power and energy conservation.

5. Suspension

Front suspension forks can be engaged / locked by turning the red wheel on the suspension fork clockwise / counter clockwise.

6. Tyre Pressure: We recommend between 20-25 PSI.

If your bike has been subjected to a lot of mud / water, please remove the battery as soon as possible and wipe away any excess dirt / moisture that has accrued near the battery terminals.

For help & support, please contact stores@depot2u.co.uk



Warranty

Valid for 12 months from date of purchase.

All of our E bikes are subjected to a Pre-Delivery Inspection (PDI) before dispatch.

KEEP THE ORIGINAL PACKAGING / BOX FOR YOUR BIKE.

RETURNS ACCEPTED IN ORIGINAL PACKAGING.

****Warranty is held by us - Depot2U and covers mechanical breakdown only.**

Wear and tear is excluded as is damage caused by improper usage.

This includes (but is not limited to):

Brake pad wear.

Tyre wear and damage.

Damage to paintwork.

Damage to battery due to accident.

Alterations made to battery and electronics.

Chain and gear wear and tear.

Please ensure you report any physical damage that may have been caused by delivery within 24 hours of receiving.

If you believe you have a warranty claim, please contact us on:

01743 851518

stores@depot2u.co.uk

In the first instance we will retrieve the bike from you and return to us. Our mechanic will look at the bike to assess the issue. If the issue is deemed to be covered by our warranty, then we will take the necessary steps to rectify the problem at no cost to yourself.

If the issue is deemed to NOT be covered by our warranty, then you will be contacted to discuss further action.

A local E Bike specialist may be used to assess the issue further and repairs made if possible, at your cost.

If the bike has failed due to a non-warranty issue, then the bike can be returned to you at your cost.

We will hold the bike for 4 weeks from the date of return.

After this period, it is at our discretion to dispose of the bike.

✂

Please fill in the below, sign and return to us to accept the above conditions and to validate your 12 months warranty.

Buyer name (print).....

Buyer signature..... Date.....

Please post back to: Depot2U, New House Farm, Shoothill, Shrewsbury, SY5 9NR or

email to stores@depot2u.co.uk


KEY & BATTERY GUIDE

1. LOCATING BATTERY



The battery is situated inside the bike frame To located—unclip the lock on the middle of the frame and fold the bike to expose the battery compartment

2. BATTERY SWITCHED ON

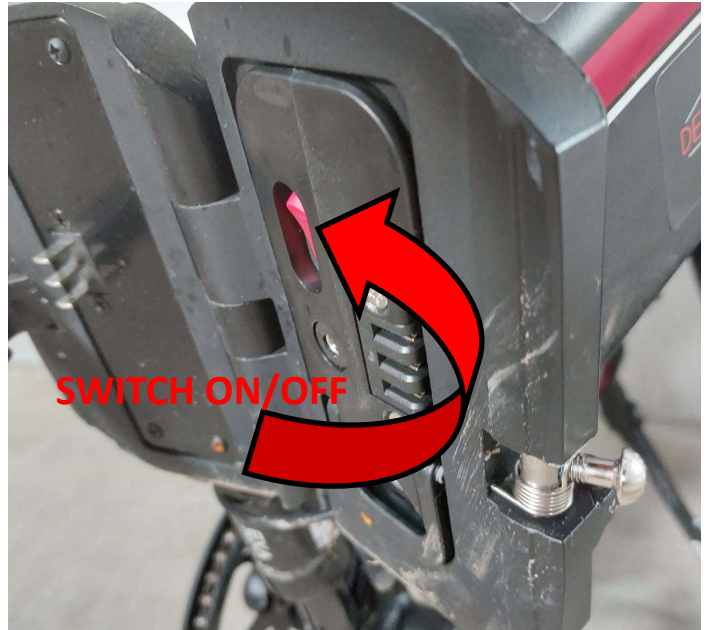

To turn battery on or off—Use the red switch located inside the battery panel

3. BATTERY RELEASED



To remove the battery, push the key in and simultaneously turn anticlockwise / left until it clicks.

4. CHARGING THE BATTERY

To charge the battery locate the charging port on the battery and plug in the charger