



# #99029 Quick Operation Guide

Please regularly check your E-Bike for a ride-ready condition.  
This includes tight spokes, inflated tyres and responsive brakes.  
Although we check the E-Bikes before shipping, we strongly advise you the Bike prior to riding for the first time.

## 1. Battery Charging & Locking

The battery can be charged on or off the Bike.

The battery lock has two positions, LOCKED & UNLOCK. To remove the battery, turn the key anti-clockwise half a rotation. Remove the battery by sliding the battery adjacent to the frame where it's mounted, towards the handlebars. The battery should then lift off.

Slide the battery back down guide rail to install.

Turn Clockwise half a rotation to lock battery into place.

Please ensure you regularly charge the battery to prolong lifespan. Do not overcharge.

Regular charging / discharging will keep battery in best form.

To charge, raise the battery handle to expose the charging port underneath. Insert end of charger and plug in. Red light denotes charging, green when fully charged.

## 2. Assembly

Carefully lift the bike out of the box. The handlebars affix using 4 screws with a 4mm hex head, and the pedals affix using a 15mm spanner (tools not included). Please refer to the labelling of the pedals to ensure the correct pedal goes on the correct side of the bike. Each pedal will have a corresponding 'L' or 'R' embossed on the plastic to indicate this.

## 3. Motor Starting

Press and hold power button on the control panel until the display lights up.

When the display illuminates, the bike is switched on.

Press and hold power button until the display is off to switch off the controller.

## 4. Controls

To switch lights on, press and hold the + button. Repeat the turn light off.

(Separate LED Battery light on rear with switch to power on)

Assist levels range between 0 (no assistance) & 3 (maximum assistance) – use the + and - buttons when the bike is switched on to cycle through the appropriate levels.

2 is a good balance of power and energy conservation. Pressing and holding the - button will engage 'walk' mode. **Important:** when you do this, the bike will begin to move. To stop the bike moving and disable walk mode, simply stop pressing the - button and press the brake if the bike is on a hill.

If your bike has been subjected to a lot of mud / water, please remove the battery as soon as possible and wipe away any excess dirt / moisture that has accrued near the battery terminals.

For help & support, please contact [stores@depot2u.co.uk](mailto:stores@depot2u.co.uk)

